 
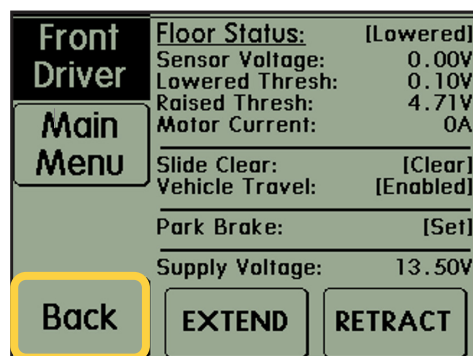 
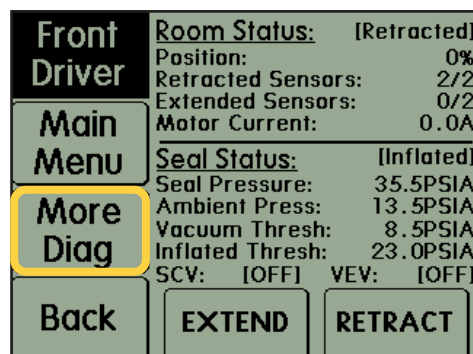 


## DIAGNOSTIC SCREENS

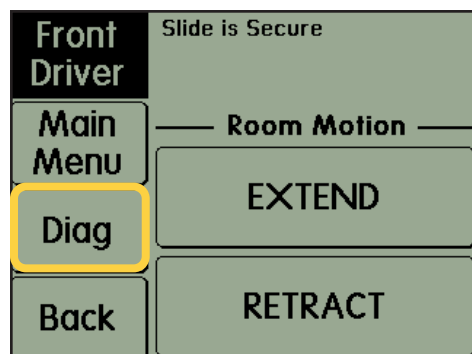

Back to previous screen

Refer to the Valid Slide System operation guide for more information about diagnostic screens.

### Overview

Each room has two slide motors, an air manifold, and a pneumatic weather seal.

It may also have an optional elevating floor with its own motor.

The slide controller is normally operated with a touchscreen.

The system may also be manually overridden if necessary, with guidance of qualified service personnel.

### Status Indicators

**Room:** Retracted, Mid-Position, or Extended

**Seal:** Inflated, Vented, or Vacuumed

**Floor:** Lowered, Mid-Position, or Raised

### Typical Operations

- The seal is always vented and vacuumed prior to slide movement.
- If the seal is inflated, the slide is prevented from moving.

## Contact Us



1-888-632-6477  
sales@validmfg.com  
validmfg.com

## VALID SLIDE SYSTEM

### QUICK REFERENCE CARD



This reference card provides a basic overview of how to use the Valid Slide System for everyday operations.

This card is a reference only. More detailed information can be found in the Valid Slide System Operation Manual.

It is recommended that you read and understand the operation manual before operating the Valid Slide System.

### Before Using the Valid Slide System



1. Ensure the coach's air system is at full pressure.
2. The ignition **MUST** be on, and if possible, have the engine running to ensure sufficient air supply for slide operation.
3. Ensure that the area around the coach is clear of obstructions.
4. Set the park brake.
5. Touch the screen to activate the display, if necessary.



**Advanced Technology.  
Simple Solutions.**

## DEFLATE THE AIR SEALS


Press **Deflate Seals** to prepare all slides for extension or retraction.

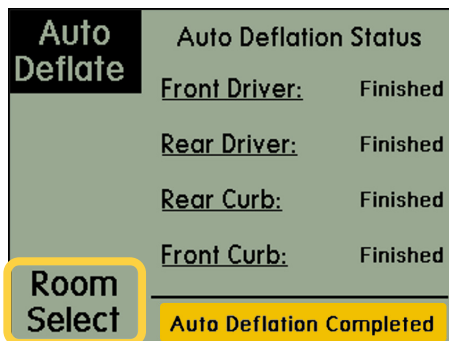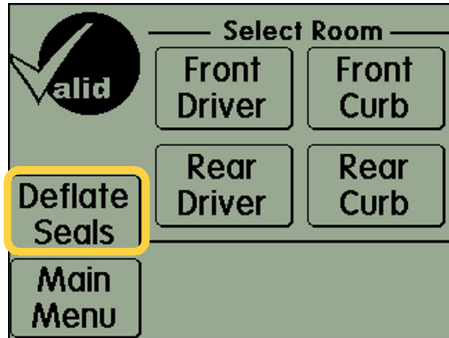

Wait for Auto Deflation to complete. Then press **Room Select**.



## SELECT THE ROOM SLIDE

 If the coach has more than one slide, select the slide you wish to extend or retract.

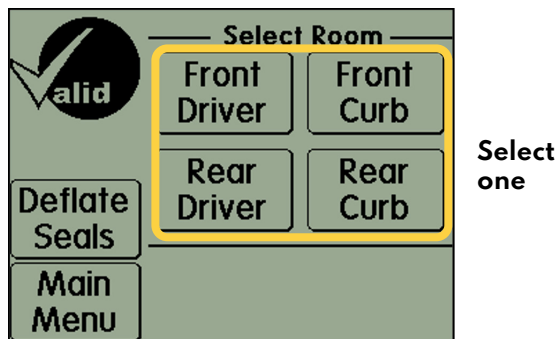

## EXTEND THE ROOM SLIDE

 To extend the room, press and hold **Extend**.

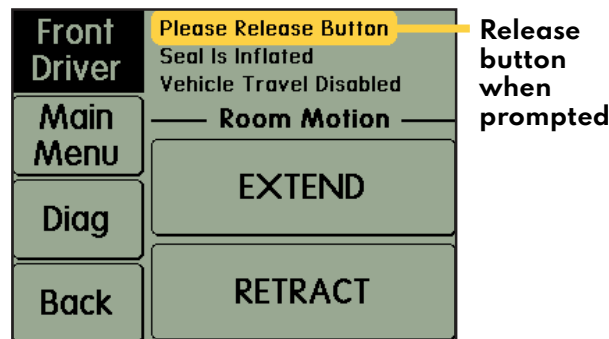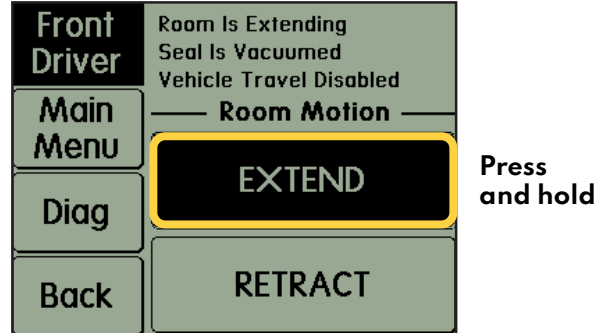


## NOTES

- If a slide is in motion, it may be stopped at any time by releasing the Extend / Retract button.
- If a slide is not moved, its seal will automatically inflate again 10 minutes after auto-deflation is complete.
- The **Inflate Seals** button will automatically revert to **Deflate Seals** after auto-deflation is complete.

## RETRACT THE ROOM SLIDE

 To retract the room, press and hold **Retract**.

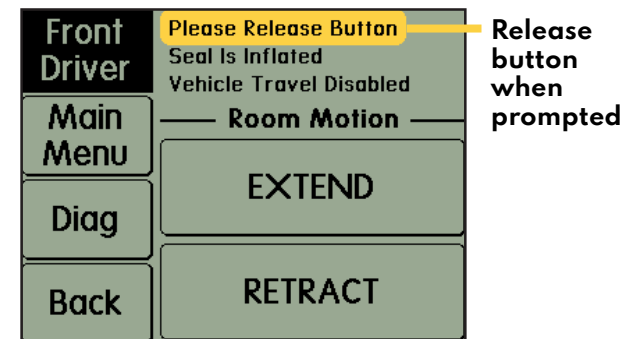

### Remember

Ensure that the Extend / Retract button is pressed and held during extension / retraction. Release the button when prompted to do so.

## BEFORE TRAVEL

Before the coach can travel, all slides must be fully retracted with their pneumatic weather seals inflated.

If this is not the case, "Vehicle Travel Disabled" is displayed.

