


## DIAGNOSTIC SCREENS

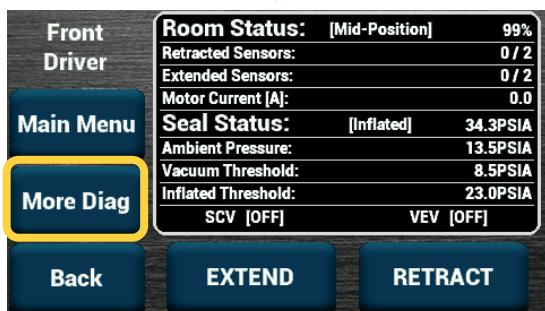

[Back to previous screen](#)

Refer to the Valid Slide System operation guide for more information about diagnostic screens.

## SYSTEM OVERVIEW

Each room has two slide motors, an air manifold, and a pneumatic weather seal.

It may also have an optional elevating floor with its own motor.

The slide controller is normally operated with a touchscreen.

The system may also be manually overridden if necessary, with guidance of qualified service personnel.

## STATUS INDICATORS

**Room:** Retracted, Mid-Position, or Extended

**Seal:** Inflated, Vented, or Vacuumed

**Floor:** Lowered, Mid-Position, or Raised

## TYPICAL OPERATIONS

- The seal is always vented and vacuumed prior to slide movement.
- If the seal is inflated, the slide is prevented from moving.



## CONTACT US

1-888-632-6477

[sales@validmfg.com](mailto:sales@validmfg.com)

[validmfg.com](http://validmfg.com)

# VALID SLIDE SYSTEM

## QUICK REFERENCE GUIDE



This reference guide provides a basic overview of how to use the Valid Slide System for everyday operations.

This guide is a reference only. More detailed information can be found in the Valid Slide System operation guide.

It is recommended that you read and understand the operation manual before operating the Valid Slide System.

### Before Using the Valid Side System

- Ensure the coach's air system is at full pressure.
- The ignition MUST be on, and if possible, run the engine to ensure sufficient air supply for slide operation.
- Ensure that the area around the coach is clear of obstructions.
- Set the park brake.
- Touch the screen to activate the display, if necessary.



**Advanced Technology.  
Simple Solutions.**

## DEFLATE THE AIR SEALS

Press **Deflate Seals** to prepare all slides for extension or retraction.




Wait for Auto Deflation to complete.

Then press **Room Select**.

## SELECT THE ROOM SLIDE

If the coach has more than one slide, select the slide you wish to extend or retract.

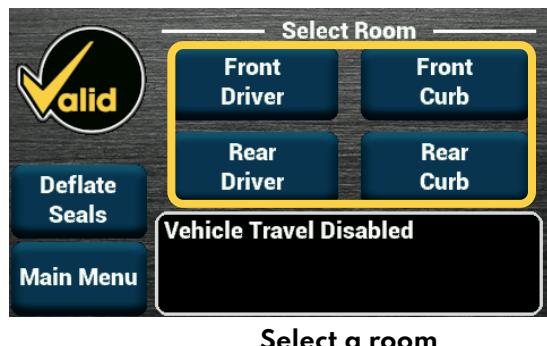


## EXTEND THE ROOM SLIDE

To extend the room, press and hold **Extend**.



Press and hold

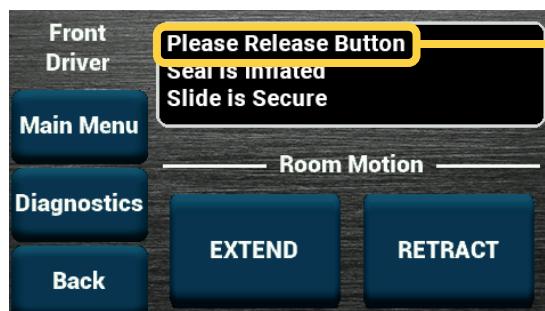


Release button  
when prompted

## NOTES


- If a slide is in motion, it may be stopped at any time by releasing the **Extend / Retract** button.
- If a slide is not moved, its seal will automatically inflate again 10 minutes after auto-deflation is complete.
- The **Inflate Seals** button will automatically revert to **Deflate Seals** after auto-deflation is complete.

## RETRACT THE ROOM SLIDE

To retract the room, press and hold **Retract**.

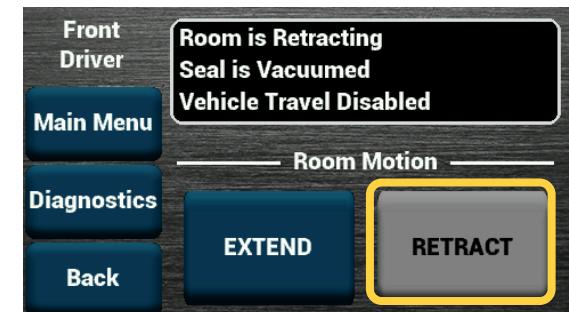

Press and hold

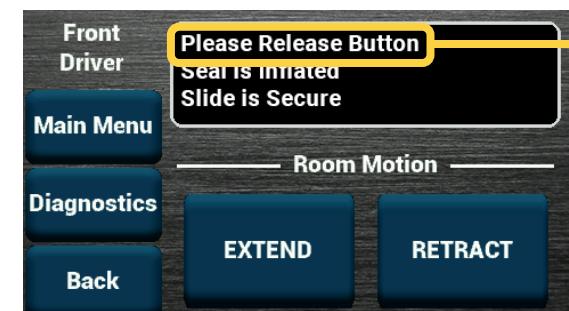

Release button  
when prompted

## BEFORE TRAVEL

Before the coach can travel, all slides must be fully retracted with their pneumatic weather seals inflated.

If this is not the case, "Vehicle Travel Disabled" is displayed.

